


## ***Routine Shoulder Arthrogram***

Application Examples: Labral tear


Sequence	FoV	Thickness	Gap
Axial T1 FS	14.0	3.0mm	1mm
Axial T2 FS	14.0	3.0mm	1mm
Coronal Obl T1 FS	14.0	3.0mm	1mm
Coronal Obl T2 FS	14.0	3.0mm	1mm
Coronal Obl T1	14.0	3.0mm	1mm
Sagittal Obl T1	14.0	3.0mm	1mm
Sagittal Obl T2 FS	14.0	3.0mm	1mm

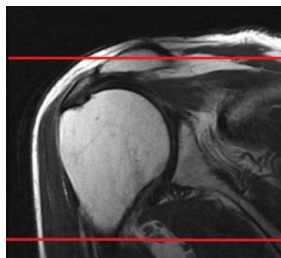


Axial Coverage



Coronal Obl Angle

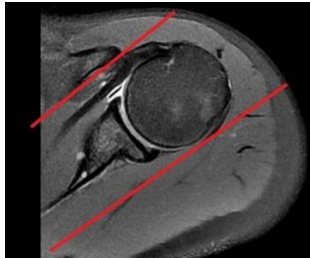

Coronal Obl Coverage

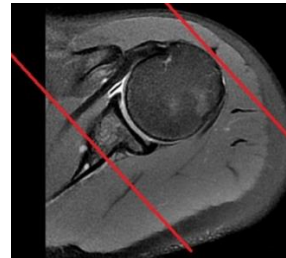

Sagittal Obl Coverage